# **4\*2 HDMI MATRIX**





HX-1542W

## **USER MANUAL** HX-1542W

V1.0

#### **Package Contents-**

- 1x HX-1542W Unit
- 1x User Manual
- 1x Power Adapter DC 12V with Lock
- 1x Remote Controller with Battery
- 2x Screws
- 4x Foot Pads

Any thing missed, please contact with your vendor.

 
## **Features**

- 4 HDMI inputs and 2 HDMI outputs matrix
- Support high-resolution display up to 4Kx2K@60Hz (YCbCr 4:2:0 8/10/12/16-bit, RGB/ YCbCr444 only 8-bit)
- Supports 3D pass-through
- HDCP2.2/HDCP1.4 Compliant
- EDID Copy from OUT port 1
- Supports IR remote control
- Supports RS-232 control

## **Specifications**


Function	HX-1542W		
HDMI In Connector	HDMI A-Type Female x 4		
HDMI Out Connector	HDMI A-Type Female x 2		
IR In	$3.5\phi$ Stereo Jack x 1		
RS-232 Port	9 Pin Female D Type Connector		
Baud Rate	9600 bps; 8 data bits, 1 stop bit, no parity		
Max. Resolution	4K x 2K@60Hz		
Power Adapter (Min.)	DC 12V with Lock		
Housing	Metal		
Dimensions (LxWxH)	150 x 80 x 25 mm		
Weight	296 g		

#### **FRONT VIEW**




- 1. HDMI IN1
- 2. HDMI IN2
- 3. IR IN
- 4. HDMI IN3
- 5. HDMI IN4

#### **REAR VIEW**

 

- 1.DC JACK 2.RS-232 3.HDMI OUT2
- 4.HDMI OUT1

#### **TOP VIEW**

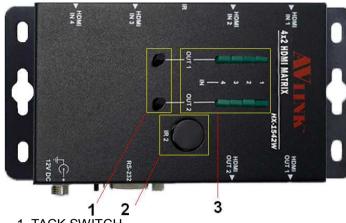

- 1. TACK SWITCH
- 2. IR2
- 3. LED

## Installation

- 1. Turn off the HDMI source and HDMI display.
- 2. Connect the HDMI cable between the HDMI source and the "HDMI IN1~IN4" port of HX-1542W.
- 3. Turn on the HDMI source and display.
- 4. Select source by TACK SW, IR or RS-232

## **Operation**

- 1. Key button Of Top Unit Press OUT1 Key: Change Output1 Link Input Port
  - Press OUT2 Key: Change Output2 Link Input Port
- 2. Remote Controller
  - Press Key "1": Change Output1 Link Input Port Press Key "2": Change Output2 Link Input Port



# (Optional) IR Receiver Cable Install

Put it into the HX-1542W "IR IN" port and place the IR Receiver Cable, so that you can point to it easily with your IR remote controller.

## **RS-232 Control**

Connect the RS-232 cable between the PC and the "RS-232" port of HX-1542W.

Key in the command you can change source to output

#### Command List:

"route 1 1"	OUT1 <del>→</del> IN1
"route 1 2"	OUT1→IN2
"route 1 3"	OUT1→IN3
"route 1 4"	OUT1→IN4
"route 2 1"	OUT2→IN1
"route 2 2"	OUT2→IN2
"route 2 3"	OUT2→IN3
"route 2 4"	OUT2→IN4

"Help" Display command List


## **Additional Option**

Select any additional options you may require.

1. IR Receiver Cable

## GND +5V Sig

## **Technical Specifications Output Signal**

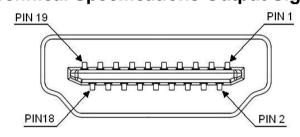

Pin#	Signal	Pin#	Signal
1	TMDS Data 2+	11	TMDS Clock Shield
2	TMDS Data 2 Shield	12	TMDS Clock -
3	TMDS Data 2-	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device)
5	TMDS Data 1 Shield	15	SCL
6	TMDS Data 1-	16	SDA
7	TMDS Data 0+	17	DDC/CEC Ground
8	TMDS Data 0 Shield	18	+5 Power
9	TMDS Data 0-	19	Hot Plug Detect
10	TMDS Clock+		

© AV LINK GROUP LTD., All rights reserved.

#### **Trademarks:**

All the companies, brand names, and product names referred to this manual are the trademarks or registered trademarks belonging to their respective companies.